

HAMADA RS34 / VS34 Parent, DU34 Upper, Phase II

Frequently Used Part Numbers

Rollers

| | |
|------------|---|
| X07-0143 | Form Roller, Soft |
| X07-0350 | Pan Roller, Hard |
| X07-0444 | Oscillator/Bridge Roller, Hard |
| XSA-070538 | Metering Roller Assy., Soft (Roller, shaft, bearings, snap rings, roll pin) |
| XSA-070533 | Lower Intermed. Roller Assy., Hard (Roller, shaft, bearings, snap rings, roll pin) |

Side Frames Assemblies

| | |
|-------------|--|
| XSA-010153P | OPS Side Frame Assy. (Side frame w/bearings) |
| XSA-01053N | NOPS Side Frame Assy. (Side frame w/bearings) |

Gears

| | |
|--------------|--|
| XSA-039901 | Idler Gear Assy. (2 per damp.) (Gear, bearing, shoulder bolt) |
| XSA-03241530 | Pan Drive Gear Assy. (Gear w/ clutch bearing) |
| XSA-03001 | Form Drive Gear Assy. (Gear w/ clutch bearing) |

Sealed Ball Bearings


| | |
|---------|---|
| X06-113 | Sealed Ball Bearing, Side Frame (4 per dampener) |
| X06-101 | Sealed Ball Bearing, Pivot (2 per dampener) |

Miscellaneous

| | |
|----------|--|
| XSA-9903 | Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw) |
| XSA-1148 | Water Pan Assy. (w/ pan bolts) |
| X99-61 | Wash Up Bottle |
| X88-104 | Installation Manual |

PRINTERS PARTS
800-543-1117 201-935-9595
fax 800-392-4072 201-935-5333
www.ppsnj.com

| Adjustments |
|-----------------------------|
| a. Metering to Pan |
| b. Metering to Intermediate |
| c. Form to Plate |
| d. Bridge to Form |

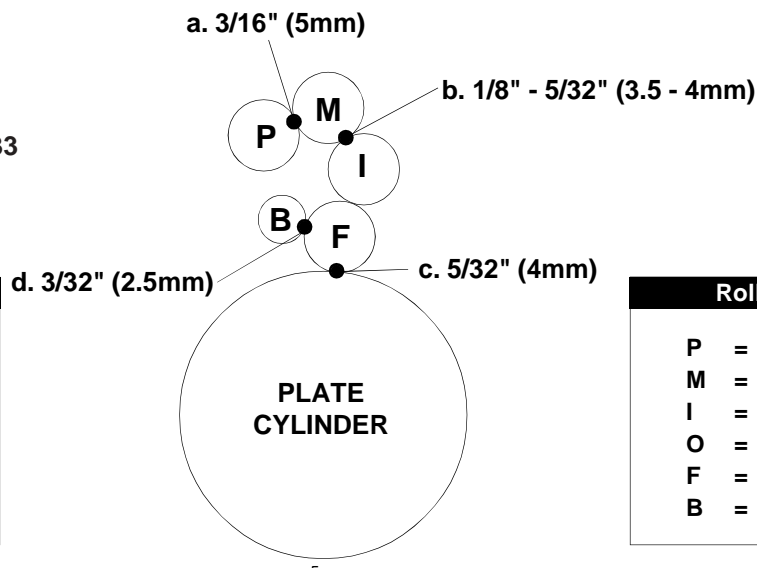

| Roller Description |
|------------------------|
| P = Pan, Hard |
| M = Metering, Soft |
| I = Intermediate, Soft |
| O = Oscillator, Hard |
| F = Form, Soft |
| B = Bridge, Hard |