

HAMADA RS34 / VS34 Parent, DU34 Upper

Frequently Used Part Numbers

Rollers

X07-0143	Form Roller, Soft
X07-0350	Pan Roller, Hard
X07-0442	Oscillator/Bridge Roller, Hard
XSA-070538	Metering Roller Assy., Soft (Roller, shaft, bearings, snap rings, roll pin)
XSA-070533	Intermed. Roller Assy., Hard (Roller, shaft, bearings, snap rings, roll pin)

Side Frames Assemblies

XSA-010153P	OPS Side Frame Assy. (Side frame w/bearings)
XSA-01053N	NOPS Side Frame Assy. (Side frame w/bearings)

Gears

XSA-039901	Idler Gear Assy. (Requires qty. 2) (Gear, bearing, shoulder bolt)
XSA-03241530	Pan Drive Gear Assy. (Gear w/ clutch bearing)
XSA-03241538	Form Drive Gear Assy. (Gear w/ clutch bearing)


Sealed Ball Bearings

X06-113	Sealed Ball Bearing, Side Frame (4 per dampener)
X06-101	Sealed Ball Bearing, Pivot (2 per dampener)

Miscellaneous

XSA-9903	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
XSA-1115	Water Pan Assy. (w/ pan bolts)
X99-61	Wash Up Bottle
X88-78	Installation Manual

PRINTERS PARTS
800-543-1117 201-935-9595
fax 800-392-4072 201-935-5333
www.ppsnj.com

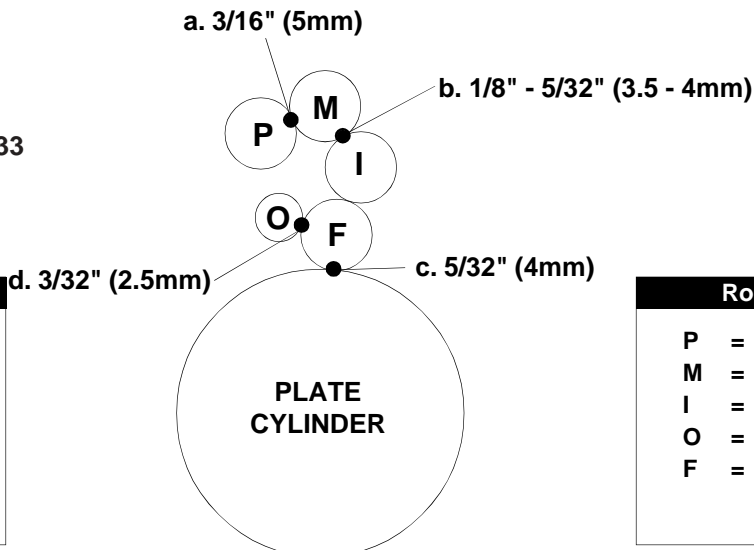

Adjustments

- Metering to Pan
- Metering to Intermediate
- Form to Plate
- Bridge to Form

Roller Description

P	=	Pan, Hard
M	=	Metering, Soft
I	=	Intermediate, Hard
O	=	Oscillator, Hard
F	=	Form, Soft