

# HAMADA RS34 / VS34 Satellite, DU34 Lower, Phase II

## Frequently Used Part Numbers

### Rollers

X07-0143	Form Roller, Soft
X07-0350	Pan Roller, Hard
X07-0444	Oscillator/Bridge Roller, Hard
XSA-070240	Metering Roller Assy., Soft (Roller, shaft, washers, snap rings, roll pin)
XSA-070533	Lower Intermed. Roller Assy., Hard (Roller, shaft, washers, snap rings, roll pin)
XSA-070538	Upper Intermed. Roller Assy., Soft (Roller, shaft, washers, snap rings, roll pin)

### Side Frame Assemblies

XSA-010145P	OPS Side Frame Assy. (Side frame w/ bearings)
XSA-010145N	NOPS Side Frame Assy. (Side frame w/ bearings)

### Gears

XSA-039901	Idler Gear Assy. (2 per damp.) (Gear, bearing, shoulder bolt)
XSA-03241530	Pan Drive Gear Assy. (Gear w/ clutch bearing)
XSA-03241538	Form Drive Gear Assy. (Gear w/ clutch bearing)


### Sealed Ball Bearings

X06-113	Sealed Ball Bearing, Side Frame (4 per dampener)
X06-101	Bearing, Pivot (2 per dampener)

### Miscellaneous

XSA-9937M	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
XSA-1150	Water Pan Assy. (w/ pan bolts)
X99-306	Mounting Frame Cap
X99-61	Wash Up Bottle
X88-105	Installation Manual

**PRINTERS PARTS**  
 800-543-1117 201-935-9595  
 fax 800-392-4072 201-935-5333  
 www.ppsnj.com

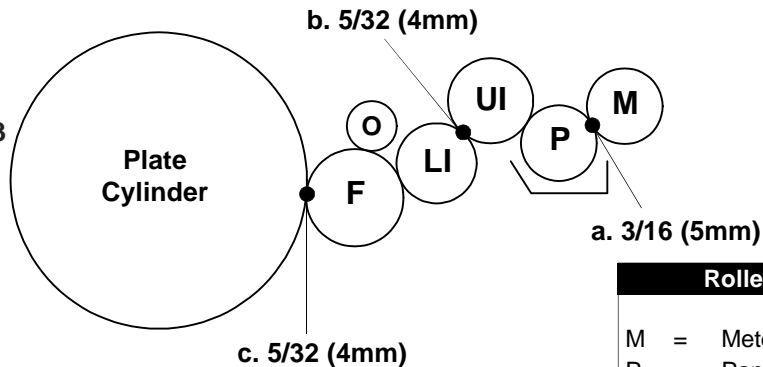

#### Adjustments

- a. Metering to Pan
- b. Upper Intermediate to Lower Intermediate
- c. Form to Plate

#### Roller Description

M	=	Metering, Soft
P	=	Pan, Hard
UI	=	Upper Intermed., Soft
LI	=	Lower Intermed., Soft
O	=	Oscillator/Bridge, Hard
F	=	Form, Soft