

# MULTI 1250 Single & Dual Lever

## Frequently Used Part Numbers

### Rollers

All units after serial number 9108-04806 (Parent Only) have a soft rubber pan roller and a hard rubber metering roller. Old style rollers are no longer available.

X07-0112	Form Roller, Soft (set collar 13-5043)
X07-0311NS	Pan Roller, Soft (set collar 13-5022)
X07-0411	Oscillator Roller, Hard
XSA-070212NS	Metering Roller Assy., Hard (Roller, shaft, clip, bearing, collar)
XSA-070507	Intermed. Assy., Soft (Roller, shaft, clip, collar, roll pin)

### Side Frame Assemblies

XSA-010110P	OPS Side Frame w/ bearings
XSA-010110N	NOPS Side Frame w/ bearings

### Gears

XSA-03300540	Form Gear Assy. (Gear w/ clutch bearing)
XSA-03300527	Pan Gear Assy. (Gear w/ clutch bearing)
XSA-03300517U	Upper Idler Gear Assy. (Gear w/ bushing, bolt)
XSA-03300517L	Lower Idler Gear Assy. (Gear, spool, bushing, bolt, washers)

### Side Frame Bearings


(After serial number 9206-07319)	
X06-108	Sealed Ball Bearing (4 per dampener)
(Before serial number 9206-07319)	
X06-346038	Thin Flanged Bushing (4 per dampener)

### Miscellaneous

XSA-9903	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
X09-0102	Compression Spring
XSA-1118	Water Pan Assy. (w/ pan bolts)
X99-28	Water Pan Hose
XSA-9905	Water Bottle (w/ cap)
X99-61	Wash Up Bottle
X88-22	Installation Manual

a. 1/8" to 5/32" (3-4mm)

b. 1/8" to 5/32" (3-4mm)

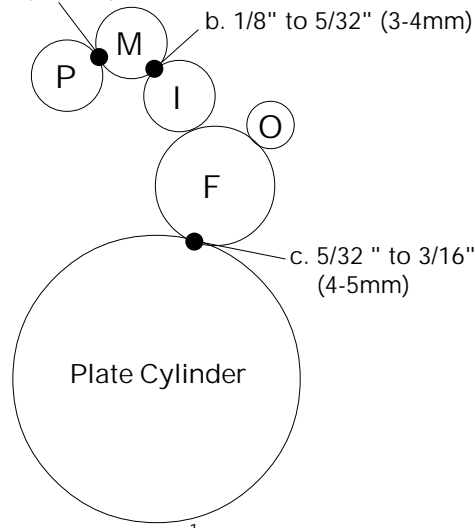

**PRINTERS PARTS**  
**800-543-1117 201-935-9595**  
**fax 800-392-4072 201-935-5333**  
**www.ppsnj.com**

#### Adjustments

- a. Metering to Pan
- b. Metering to Intermediate
- c. Form to Plate

#### Roller Description

P	=	Pan, Soft
M	=	Metering, Hard
I	=	Intermediate, Soft
O	=	Oscillator, Hard
F	=	Form, Soft