

SAKURAI 258

Frequently Used Part Numbers

Rollers

X07-0127	Form Roller, Soft
X07-0327	Pan Roller, Hard
X07-0424	Oscillator Roller, Hard
X07-0224	Metering Roller, Soft
X07-0526	Intermediate Roller, Soft
X07-0605	Aux. Rider Roller, Hard

Side Frame Assemblies

XSA-010156	OPS Side Frame Assy. (Side frame w/ bearing)
XSA-010157	NOPS Side Frame w/ Bearing (Side frame w/ bearing)


Sealed Ball Bearings

X06-115	Sealed Ball Bearing, Side Frame (2 per dampener)
X06-112	Sealed Ball Bearing, Pan Shaft (2 per dampener)
X06-113	Sealed Ball Bearing, Form, Drive Shaft, Dummy Shaft, Pivot

Miscellaneous

XSA-99192	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
X09-0206	Compression Spring (4 per dampener)
XSA-1131	Water Pan Assy. (w/ pan bolts)
X99-61	Wash Up Bottle
X88-56	Installation Manual

PRINTERS PARTS
800-543-1117 201-935-9595
fax 800-392-4072 201-935-5333
www.ppsnj.com

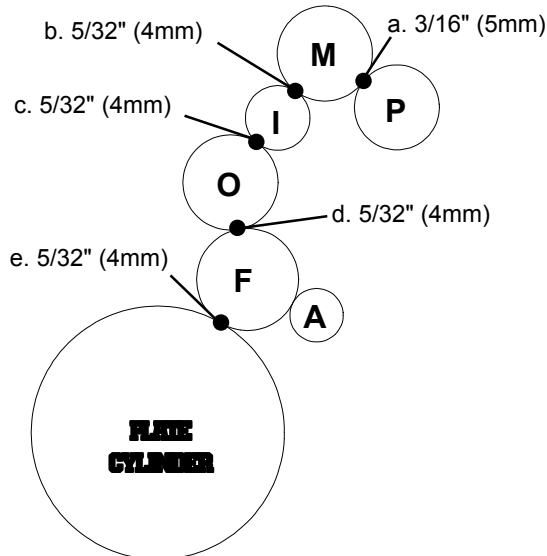

Adjustments

- a. Metering to Pan
- b. Metering to Intermediate
- c. Intermediate to Oscillator
- d. Oscillator to Form
- e. Form to Plate

Roller Description

P	=	Pan, Hard
M	=	Metering, Soft
I	=	Intermed., Soft
O	=	Oscillator, Hard
F	=	Form, Soft
A	=	Aux. Rider, Hard